

User Guide
English

iPhone/iPod not included




jbl on stage™ micro II speaker dock for iPhone/iPod



Important Safety Instructions

Please read the following precautions before use:

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over. 
13. Unplug this apparatus during lightning storms or when unused for long periods of time.

14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

15. Do not expose this apparatus to dripping or splashing and ensure that no objects filled with liquids, such as vases, are placed on the apparatus.

16. To completely disconnect this apparatus from the AC Mains, disconnect the power supply cord plug from the AC receptacle.

17. The mains plug of the power supply cord shall remain readily operable.

18. Do not expose batteries to excessive heat such as sunshine, fire or the like.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

FCC regulations

FCC Information For Users

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference; and (2) this device must accept any interference received, including interference that may cause undesired operation.

Radio and Television Interference

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and then on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Increase the separation between the equipment and receiver.
- Connect the equipment to a different outlet so that the equipment and receiver are on different branch circuits.
- Consult the dealer or an experienced radio/TV technician for help. Changes or modifications not expressly approved by JBL could void the user's authority to operate the equipment.

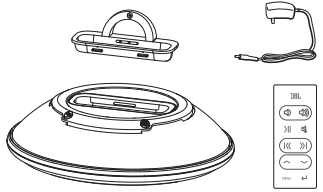


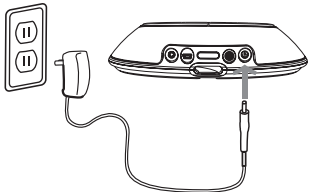
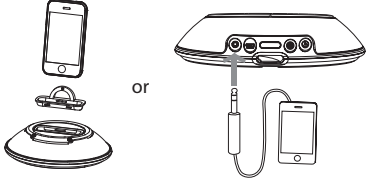
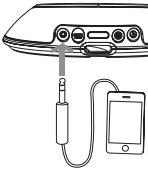

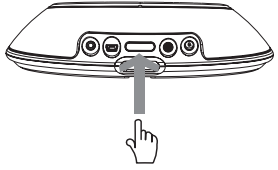
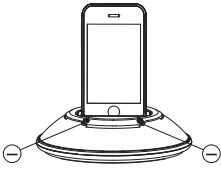
IC Statement and Warning

This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada

Important Note for All Electronic Products:

Before inserting or unplugging audio cables from the source device's headphones or line-level output jacks, it is good practice to turn off the device first. This will prolong the life of your unit, help protect your device from static electricity and prevent potential damage.

jbl on stage micro II easy setup guide

			
<p>Step 1. Carefully unpack your speaker system and identify all its components. JBL On Stage Micro II, power supply, remote and adapter</p>	<p>Step 2. Move the battery door to the unlocked position to open the battery compartment.</p>	<p>Step 3. Place 4 AAA batteries in the battery compartment.</p>	<p>Step 4. Connect the power adapter into the input marked on the rear of the JBL On Stage Micro II and plug the power adapter into a wall outlet or power strip.</p>
 <p>or</p> 	 <p>* Auxillary audio cables not included</p>		
<p>Step 5. Place the appropriate iPhone/iPod adapter onto JBL On Stage Micro II. Place your iPhone/iPod on the docking connector or connect the audio input cable to the rear of the JBL On Stage Micro II. Connect the audio cable to the audio source.</p>	<p>* Auxillary audio cables not included</p>	<p>Step 6. Press the Power button on the back of the JBL On Stage Micro II. A green LED will light when the JBL On Stage Micro II system is on.</p>	<p>Step 7. Adjust the volume using (+) to increase and (-) to decrease. Press both to mute the JBL On Stage Micro II. Press either button to unmute.</p>

Synching and transferring files with your computer

Make sure your iPhone/iPod is securely docked into the OSMII. Connect a USB cable (sold separately) into the USB jack on the back of the unit, connect other end of the USB cable directly to your computer's USB port.

troubleshooting your jbl on stage micro II

Technical Specifications	Symptom	Possible Problem	Solution
	Sound Quality		
<p>Frequency Response: 70Hz – 20kHz</p> <p>Power Consumption: 10W Maximum</p> <p>Power Input: 6V/1.5A</p> <p>JBL On Stage Micro II Transducer: (2) 1" Full range per channel</p> <p>Dimensions: Diameter – 6" (150mm) Height – 1-3/4" (38mm)</p> <p>System Weight: 2.22 lb (1.01kg)</p> <p>Battery: Size – AAA (4 pcs.) Type – Alkaline, NiMH</p> <p>DO NOT MIX BATTERY TYPES. DO NOT MIX CHARGED AND PARTIALLY CHARGED BATTERIES. BATTERIES WILL NOT RECHARGE WHILE IN JBL ON STAGE MICRO II.</p>	<p>No sound from the JBL On Stage Micro II speaker system</p>	<p>No power to the system</p> <p>Power adapter plug is not inserted correctly</p>	<p>Ensure that the power supply is connected to a live power source and properly connected to the JBL On Stage Micro II. Note: When the JBL On Stage Micro II is powered, a green power LED on the JBL On Stage Micro II should light up.</p>
		<p>No volume or low volume</p>	<p>Touch the volume "Up" (+) pad on the volume control to unmute and/or increase the system volume level.</p> <p>Note: Touching the volume "Down" (-) pad lowers the system volume. Touching both the (+) and (-) volume control pads at the same time will mute the system.</p>
		<p>Input source is low</p>	<p>Increase the volume level on the audio source device.</p>
		<p>Low or drained batteries</p>	<p>Replace the batteries.</p>
		<p>iPhone/iPod is paused</p>	<p>Press the Play button on the iPhone/iPod or remote control.</p>
		<p>iPhone/iPod is paused (battery-only mode)</p>	<p>Note: If the iPhone/iPod is paused more than 10 minutes, press the JBL On Stage Micro II Power button to turn the unit back on. Press either (+) or (-) to unmute.</p>

If you have any questions or need further assistance, please visit www.jbl.com.
These specifications are subject to change without notice.

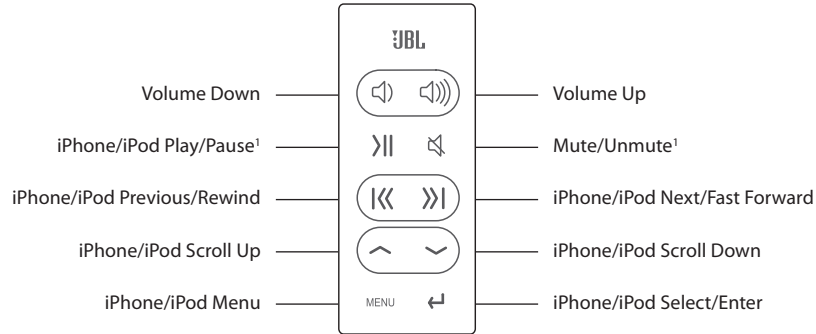 
Symptom	Possible Problem	Solution
Troubleshooting		
No sound from the JBL On Stage Micro II speaker system (continued).	The JBL On Stage Micro II has been muted for more than 10 minutes in the battery-only mode	Press the JBL On Stage Micro II Power button to turn the unit back on. Press either (+) or (-) to unmute.
No sound, no LED	No audio signal has been received for 10 minutes that On Stage Micro II is in standby mode.	Make sure audio signal is supplied through docked iPhone/iPod or audio "in" port.
No power; green LED is not on	Wall adapter is not plugged into the JBL On Stage Micro II correctly. Wall adapter is not receiving AC power	Check the connection of the wall adapter. Place the wall adapter in a known powered outlet. Test the outlet with a lamp or other device. Connect the JBL On Stage Micro II to a known audio source. Test the audio source with headphones.

Battery Disposal

Alkaline batteries are considered non-hazardous. Rechargeable batteries (i.e., nickel cadmium, nickel metal-hydride, lithium and lithium-ion) are considered hazardous household materials and may pose an unnecessary health and safety risk.

In the European Union and other locations, it is illegal to dispose of any battery with household trash. All batteries must be disposed of in an environmentally sound manner. Contact your local waste management officials for information regarding the environmentally sound collection, recycling and disposal of used batteries.

jbl on stage micro II remote easy setup guide



1. In the battery-only mode, the JBL On Stage Micro II loudspeaker dock will turn off to save battery power when muted or paused for longer than 10 minutes.
2. In the wall adapter power supply mode JBL On Stage Micro II will go into standby mode if no audio signal is detected for 10 minutes. The green LED will turn off. Once an audio signal is detected the speaker will return to normal playing mode and the green LED will light up.
3. iPhone and iPod touch menu navigation may require the user to manually put the iPhone/iPod in music mode.

JBL and Odyssey are trademarks of Harman International Industries, Incorporated, registered in the United States and/or other countries.

The trademark On Stage is used with permission of OSA International, Inc.

iPhone is a trademark of Apple Inc., registered in the U.S. and other countries. iPod is a trademark of Apple Inc., registered in the U.S. and other countries. iPod and iTunes are trademarks of Apple Inc., registered in the U.S. and other countries. iPhone/iPod not included. "Made for iPod" means that an electronic accessory has been designed to connect specifically to iPod and has been certified by the developer to meet Apple performance standards. "Works with iPhone" means that an electronic accessory has been designed to connect specifically to iPhone and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

Features, specifications and appearance are subject to change without notice.

Harman International

Harman Consumer Group, Inc.

8500 Balboa Boulevard, Northridge, CA 91329 USA

1.516.255.4525 (USA only)

www.jbl.com

© 2009 Harman International Industries, Incorporated. All rights reserved.

Document Number: 950-0282-001 rev. B

